

SUPERIORE
Refrigerator
Use & Care
Manual

F_36FFS_



Table of Contents

Safety / Warnings

Safety	4
Warnings	5
Child Safety	6
Electrical Connections	6

Installation Requirements

Location	7
Leveling Refrigerator	7
Cleaning	8
Switching On	8
Filling	8

Introduction

General Description	8
---------------------	---

Display Controls

Refrigerator	10
Freezer	11
Water Filter	11
Energy Savings	11, 12
Power	12

Using the Appliance

Compartments	12
Shelves and Racks	12, 13
Drawers	13
Water Dispenser	13
Freezer	13
Ice Maker	14

Cleaning and Care

Exterior	15
Interior	15
Door Seals	16
LED Lights	16

Helpful Hints and Tips

Energy Savings	17
Refrigeration	17
Freezing	17
Storage	18
Switching Off	18

Servicing

Troubleshooting	19–20
Disposal	22

Door Removal

Disassembling Doors	23
Re-attaching Doors	24
Disassembling Drawer	24
Re-assembling Drawer	24

Installing Water Lines

Connecting to Supply	25
Connecting to Water Filter	26
Connecting to Refrigerator	26, 27
Fixing Water Line	27, 28

Limited Warranty

Coverage	29
Disclaimer	29

Safety / Warnings



It is hazardous for anyone other than authorized service personnel to carry out servicing or repairs which involves the removal of covers. To avoid the risk of an electric shock do not attempt to repair this appliance yourself.



Risk of fire / flammable materials.

Safety Tips

- Do not use electrical appliances such as a hair dryer or heater to defrost your Freezer.
- Containers with flammable gases or liquids can leak at low temperatures.
- Do not store any containers with flammable materials, such as spray cans, fire extinguisher refill cartridges etc. in the Freezer.
- Do not place carbonated drinks in the Freezer compartment.
- Do not remove items from the Freezer compartment if your hands are damp/wet, as this could cause skin abrasions or "Frost/Freezer burns". Bottles and cans must not be placed in the Freezer compartment as they can burst when the contents freeze.
- Manufacturer's recommended storage times should be adhered to. Refer to relevant instructions.
- Do not allow children to tamper with the controls or play with the Refrigerator. The Refrigerator is heavy. Care should be taken when moving it. It is dangerous to alter the specification or attempt to modify this product in any way.
- Do not store inflammable gases or liquids inside your Freezer.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of type recommended by the manufacturer.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Safety / Warnings



This appliance is not intended for use by persons (including children) or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- **WARNING:** Unpack and check through the appliance. Should any damage be evident, don't plug in the appliance but contact the store immediately from which you purchased it. Keep all packing materials in this case.
- **WARNING:** We recommend that you wait for 4 hours before connecting the appliance to allow the refrigerant to flow back into the compressor.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING:** Refrigerating appliances – in particular a refrigerator-freezer – might not operate consistently (possibility of defrosting of contents or temperature becoming too warm in the frozen food compartment) when sited for an extended period of time below the cold end of the range of temperatures for which the refrigerating appliance is designed.
- **WARNING:** The refrigerant used in your appliance and insulation materials requires special disposal.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

To avoid contamination of food, please observe the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing, or making ice-cream and making ice cubes.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Child Safety

DANGER: Risk of child entrapment. Before you throw away your old appliance:

- Take off the doors
- Leave the shelves in place so that children may not easily climb inside.

Freon-Free

The freon-free refrigerant (R600a) and the foaming insulation material (cyclopentane) are environmentally friendly, causing no damage to the ozone layer and have a very small impact on the global warming. R600a is flammable, and sealed in a refrigeration system, without leakage during normal use. In case of refrigerant leakage due to the refrigerant circuit being damaged, be sure to keep the appliance away from open flames and open the windows for ventilation as quickly as possible.

Electrical Connection



Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized service center.

This refrigerator should be properly grounded for your safety. The power cord of this refrigerator is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.

Do not, under any circumstances, cut or remove the third ground prong from the power cord supplied.

This refrigerator requires a standard 115V A.C. ~/60Hz electrical outlet with three-prong ground.

This refrigerator is not designed to be used with an inverter.

The cord should be secured behind the refrigerator and not left exposed or dangling to prevent accidental injury.

Never unplug the refrigerator by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.

Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance. Use of an extension cord can negatively affect the performance of the unit.


Installation Requirements

Installation Location

When selecting a position for your Refrigerator you should make sure the floor is flat and firm, and the room is well ventilated. Avoid locating your Refrigerator near a heat source, e.g. cooker, boiler, or radiator. Also avoid direct sunlight in out-buildings or sun lounges. If you are placing your Refrigerator in an out-building such as a garage or annex ensure that the Refrigerator is placed above the damp floor, otherwise condensation will occur on the Refrigerator cabinet.

Never place the Refrigerator in a wall recess or into fitted cabinets or furniture. When your Refrigerator is working, the grille at the back may become hot and the sides warm. Therefore, the back part of the refrigerator / freezer must be installed at least 75mm of free space, both sides and top should be left with more than 100mm.



Do not drape the Refrigerator with any covering.

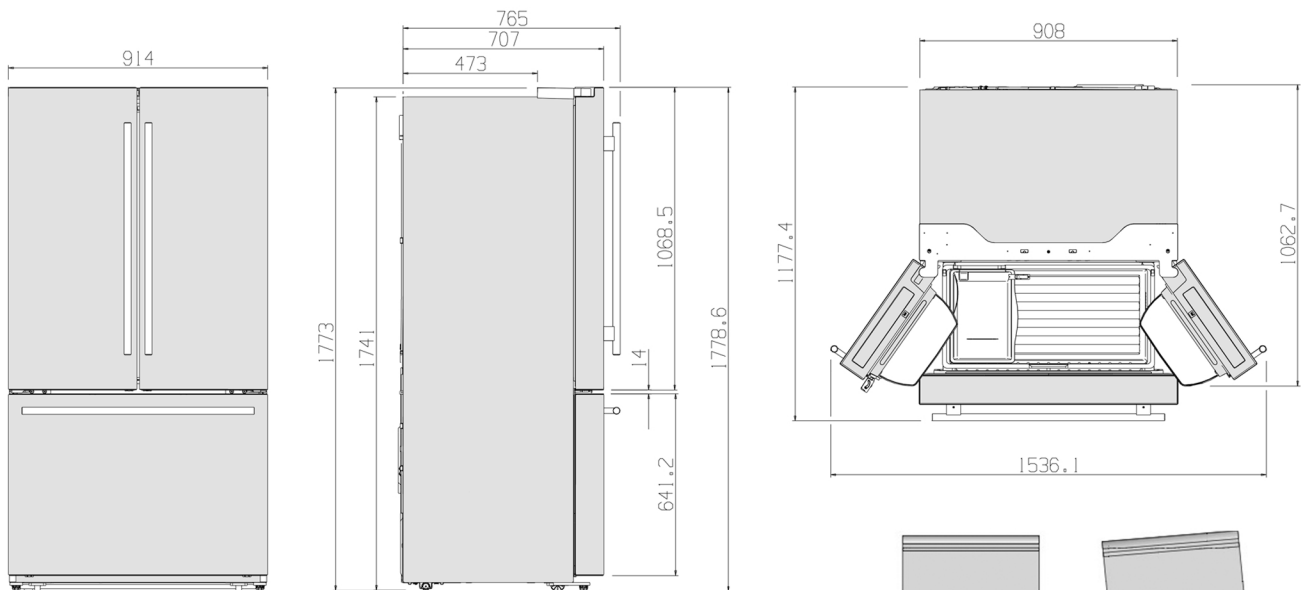

Leveling the Refrigerator

If the Refrigerator is not level, the door and magnetic seal alignment will be affected and may cause your Refrigerator to work incorrectly. Once the Refrigerator is placed in its final location, adjust the leveling feet at the front by rotating them.

 To allow the doors to self-close, tilt the top back by 10-15mm.

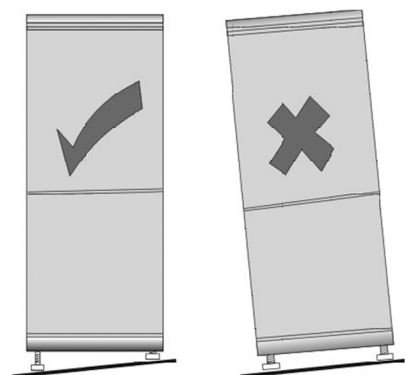

Door Removal

In case your home access door is too narrow for the refrigerator to pass through, remove the refrigerator doors and drawers. See page 24.

If you do not need to remove the appliance doors, proceed to 'Installing Water Lines' on page 27. If you need to remove the doors, continue below.

Installation Requirements (con't)

Cleaning Before Use

Wipe the inside of the freezer with a solution of mild detergent and water. Then rinse with warm water using a damp sponge or cloth. Wash the baskets and shelves in warm, soapy water and dry completely before replacing in the freezer. The external parts of the freezer can be cleaned with wax polish.

Before Switching On!

LET YOUR REFRIGERATOR STAND UPRIGHT FOR APPROXIMATELY FOUR HOURS BEFORE CONNECTING TO POWER.

The coolant fluid needs time to settle. If the appliance is switched off at any time, wait 30 minutes before switching back on to allow the coolant fluid to settle.




Door/Drawer Handle Installation



YOUR SUPERIORE FRIDGE MOD F_36FFS_ DOES NOT COME WITH HANDLES, THAT MUST BE PURCHASED AS SEPARATE KIT FROM YOUR DEALER. BELOW A GENERAL EXPLANATION ON HOW TO INSTALL THE HANDLES.

1. Place one of the Handles over the two Pins on one of the doors. Secure in place by tightening the Set Screws with the supplied Allen Wrench.
2. Repeat the process with the other two Handles.

NOTE: The Handles should be positioned so the Set Screws are located toward the inside of the doors and the bottom of the drawer.

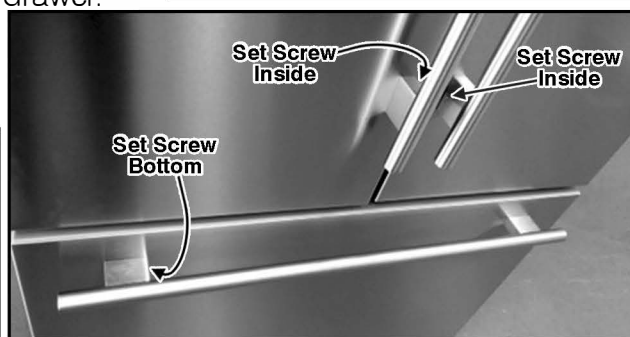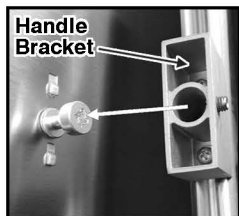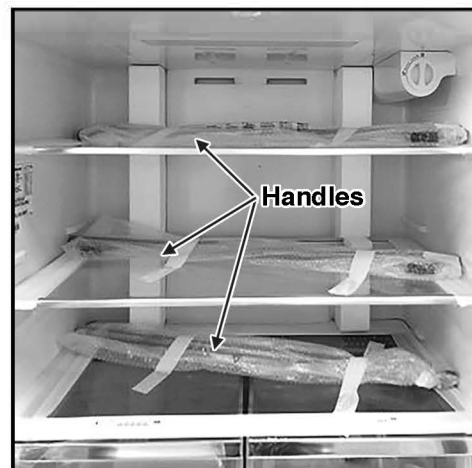

Before Filling Your Freezer



Before storing foods in your freezer, turn the freezer on and wait 24 hours to make sure it is working properly and to allow the freezer to reach the desired temperature.

Introduction

General Description of Refrigerator

Models without ice maker

- ① Door rack
- ② Vertical baffle part
- ③ Fridge door seal
- ④ Fruit and vegetable crisper
- ⑤ Multifunctional drawer
- ⑥ Upper freezer drawer
- ⑦ Lower freezer drawer
- ⑧ Adjustable bottom feet
- ⑨ Top cover
- ⑩ Fridge LED light
- ⑪ Vertical baffle guide block
- ⑫ Display panel
- ⑬ Wind channel part
- ⑭ Glass shelf
- ⑮ Crisper cover
- ⑯ Serving tray
- ⑰ Roll wheel
- ⑱ Fridge door
- ⑲ Freezer door
- ⑳ Water filter

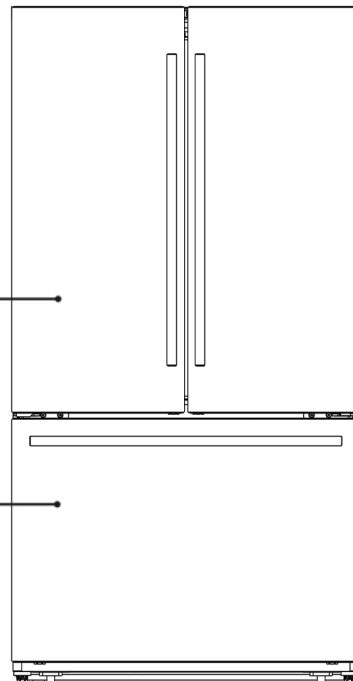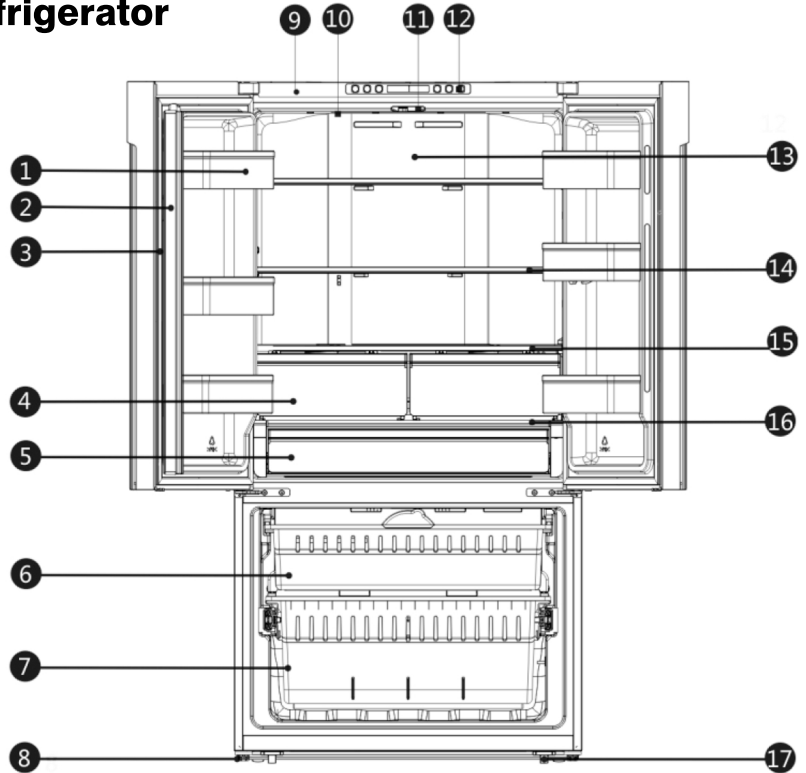


NOTE!

- Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same.
- To get the best energy efficiency of this product, please place all shelves, drawers and baskets on their original position as per the illustration above.


Display Controls

Your product has one control panel which is installed on the top cover, it may be different depending on the model. Use your appliance according to the following control guidelines.

 Models with ice maker



Models without ice maker

 

When the appliance is powered on for the first time, the backlighting of the icons on the display panel will light up immediately. If no buttons have been touched or the doors are closed, the backlighting will turn off after 60seconds.

The control panel consists of two areas about temperature, and one area about different modes.

Caution!

When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperatures displayed on the panel, depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the appliance.

Ice Control (Only applicable for models with ice maker)

 


This button controls the ice maker. You can touch the "Ice On/Off" button to control the ice maker. When the "Ice On/Off" function light is on, the ice maker is working. If you want to lock the ice maker, touch the "Ice On/Off" button again until the button light is off.

Fridge Temperature Control



Press the Fridge button to turn on the refrigerator temperature control, then press and hold the Fridge button to select a temperature setting. If you have set the temperature type to Fahrenheit, the temperature settings cycle from 47°F to 35°F in one degree increments.



If you have set the temperature type to Celsius, the temperature settings cycle from 2°C to 8°C in one degree increments.

Super Cool



If you want to increase the cooling accelerator to cool products in Fridge, please touch this button. The super cool icon "❄️" will be illuminated, and the fridge temperature setting displays at 35°F.

 
Super cool automatically switches off after 3 hours, and the refrigerator temperature setting will revert back to the previous setting.

When super cool function is on, you can touch the "Super Cool" button again to switch it off. The fridge will not retain the Super Cool function when powered off.

Freezer Temperature Control



Press the Freezer button to turn on the freezer temperature control, then press and hold the Freezer button to select a temperature setting. If you have set the temperature type to Fahrenheit, the temperature settings cycle from 6°F to -12°F in one degree increments.



If you have set the temperature type to Celsius, the temperature settings cycle from -14°C and -24°C in one degree increments.

Super Freeze



If you want to increase the freezing accelerator in Freezer, please touch this button, the super freeze icon “❄️” will be illuminated, the fridge temperature setting displays -12°F.

Super Freeze can quickly lower the temperature and freeze your food faster than usual. This can retain more of the vitamins and nutrients in fresh food and keep your food longer.

The super freeze mode allows you to freeze items inside with maximum speed. We recommend that you let the appliance operate for 6 hours first. Super Freeze automatically switches off after 52 hours, and the freezer temperature setting will revert back to the previous setting.

When the Super Freeze function is on, you can touch the “Super Freeze” button again to switch off. If power cutoff happens while super freeze is activated, the super freeze will not be reactivated after power resupplied.


Note:

- If you want to exchange the “°F” to “°C”, please press and hold the “Super Cool” and “Energy Saving” buttons for 3 seconds.

Water Filter (Only applicable for models with ice maker)



In general, you should change the water filter every 6 months to ensure the highest possible water quality.

After the refrigerator has dispensed about 300 gallons of water, the filter icon  will blink, reminding you to replace the water filter.

Purchase a new water filter. Before that, please check that the new filter is the same filter type that came with your refrigerator and can be correctly used in your refrigerator.

After you change a new water filter, push and hold the “Ice On/Off” and “Super Freeze” buttons for 3 seconds to make the blinking stop. When you replace the water filter, some water may leak from the filter and lines. Please let the water flow in a pan and wipe up any leakage that may have occurred.

Energy Saving



You can touch this button to turn Energy Saving mode on and off. When you turn Energy Saving on, the Energy Saving icon “🌱” lights up.

The temperature of the fridge is automatically switched to 42°F and the freezer to 2°F. If Energy Saving is off, the icon “🌱” will go off and the temperature setting will revert back to the previous setting.

Note:

- The control panel will light up when the refrigerator door is open, or you touch any button.

Energy Saving (con't)

Note: (con't)

- The light will go off without touching any buttons or the doors have been closed over one minute.
- When the refrigerator is powered on, all the icons of the control panel will light up for 3 seconds, and a buzzer sounds. And the temperature setting reverts back to the previous setting.

Power on/off (Only applicable for models without ice maker)



You can switch on or switch off your appliance by pressing this button.

Alarm

- When fridge or freezer door has been opened for over 2 minutes, door alarm will sound. In case of door alarm, buzzer will sound 3 times every 1 minute and will stop alarming automatically after 8 minutes.
- To save energy, please avoid keeping the door open for a long time when using the appliance. The door alarm can also be cleared by closing the door.

Using your Appliance

This section tells you how to use most of the useful features. We recommend that you read through them carefully before using the appliance. It may be different depending on the model

1. Using your refrigerator compartment


The refrigerator compartment is suitable for storage of vegetables and fruit. Food inside should be packed to store in order to avoid losing moisture or flavor permeating into other foods.

Caution!

When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperatures displayed on the panel, depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the appliance.

Glass shelves and Door racks

The refrigerator compartment is provided with several glass shelves and several different door racks, which are suitable for the storage of eggs, canned liquid, bottled drinks and packed food. They can be placed at different heights according to your need. Do not place too many heavy things in racks. Before you lift up the door shelf vertically, please take the food out.

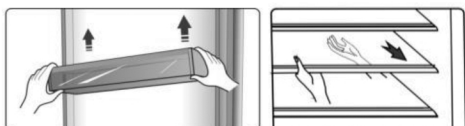

Using your Appliance (con't)

Glass shelves and Door racks (con't)

Note:

All the door racks and shelves can be taken out to be cleaned.

When you remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides.

When you return the shelves, make sure there is no obstacle behind and gently push the shelf back into the position.

Drawers

These are suitable for storage of fruits and vegetables – and it can be taken out to be cleaned.

To take them out, open the door to the final location first. Then pull out the drawer and tilt up the front of the crisper after moving slightly in the direction.

2. Using the dispenser to get cold water (Only applicable for models with water dispenser)

The water dispenser is located behind the left refrigerator door. Move your glass down the dispenser lever in the suggested position and press it.

Note:

- Don't push the dispenser lever forward without a glass, it may cause the water to leak from the dispenser.
- Do not immediately removing your cup or glass from the dispenser after dispensing your water. You should wait for 2 or 3 seconds to prevent spills.
- Dispenser does not work when door is not closed.
- Run water frequently to maintain a cold temperature. When you first use this function, the water may not cold enough. Wait for a short time to ensure the appropriate temperature.



Water clouding phenomenon

All water provided to the refrigerator flows through the filter which is an alkaline water filter. In the filtering process, the pressure of the water that has flowed out of the filter is increased, and the water becomes saturated with oxygen and nitrogen. When this water flows out into the air, the pressure plummets and the oxygen and nitrogen get supersaturated, which results in gas bubbles. The water may temporarily look misty or cloudy due to these oxygen bubbles. After a few seconds, the water will look clear.

3. Using the freezer compartment

The freezer compartment is provided with an upper drawer, a lower drawer and a ice box (optional). To remove all of them, refer to page 7 for disassembly instruction.


Using your Appliance (con't)

Automatic Icemaker (Only applicable for models with ice maker)

Automatic Ice maker can make ice automatic.

Note:

- When the ice maker dumps ice into the ice box, any sounds you hear are part of normal operation.
- If you do not dispense ice for a long periods of time, Ice may clump in the Ice box. If this occurs, please remove all the ice and empty the box
- If you are going on a long vacation or business trip and won't be using the water dispenser or ice maker part for period of time, please close the water supply to prevent leaks.
- Do not use the first batch of ice made by the ice maker.
- Do not store liquid cans in ice box, bursting may occur.

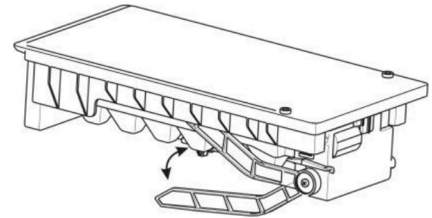

Cleaning and care

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly at least every two months.

Caution!

The appliance must not be plugged in during cleaning. Danger of electrical shock!
Before cleaning switch the appliance off and remove the plug from the mains socket.


Exterior cleaning

To maintain good appearance of your appliance, you should clean it regularly.

- Spray water onto the cleaning cloth instead of spraying directly on the surface of the appliance. This helps ensure an even distribution of moisture to the surface.
- Clean the doors, handles and cabinet surfaces with a mild detergent and then wiped dry with a soft cloth.

Caution!

- Don't use sharp objects as they are likely to scratch the surface.
- Don't use Thinner, Car detergent, Clorox, ethereal oil, abrasive cleansers or organic solvent such as Benzene for cleaning. They may damage the surface of the appliance and may cause fire.

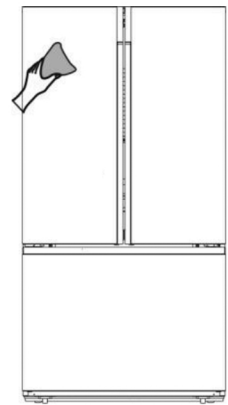

Interior cleaning


You should clean the appliance interior regularly. It will be easier to clean when food stocks are low. Wipe the inside of the refrigerator freezer with a weak solution of bicarbonate of soda, and then rinse with warm water using a damp sponge or cloth. Wipe completely dry before replacing the shelves and baskets. Thoroughly dry all surfaces and removable parts before putting them back into place.

Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept open too long. If the frost is too thick, choose a time when the freezer is nearly empty and proceed as follow:

1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the process.
2. When defrosting is completed, clean your freezer as described above.

Warning!

Do not use sharp objects to remove frost from the freezer compartment. Only after the interior is completely dry should the appliance be switched back on and plugged back into the mains socket.

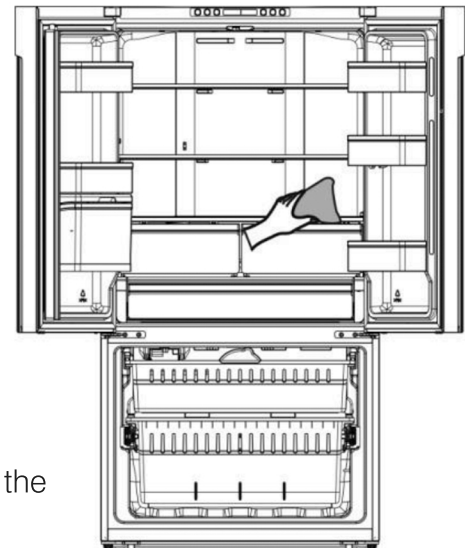


Cleaning and care (con't)

Door Seals

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

Caution!

Only after the door seals are completely dry should the appliance be powered on.

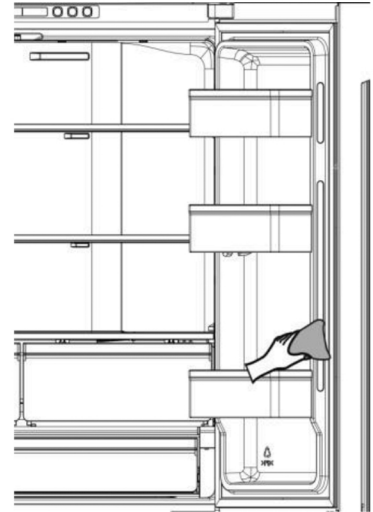

Replacing the LED light

Warning!

The LED light must be replaced by a competent person. If the LED light is damaged, follow the steps below:

1. Unplug the refrigerator from the electrical outlet.
2. Locate the LED light on the inside of the refrigerator.
3. Remove the light cover. Insert a tool (tweezers or a screwdriver) along the side opening of the LED light cover. Pop open the side over the cover, grasp the exposed side and gently pull towards you to remove the item and expose the LED light.
4. Replace the new LED light.
5. Replace the light cover.

Helpful hints and tips

Energy saving tips

We recommend that you follow the tips below to save energy.

- Try to avoid keeping the door open for long periods in order to conserve energy. Ensure the appliance is away from any sources of heat (Direct sunlight, electric oven or cooker etc.)
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free, room. Please refer to Installing your new appliance chapter.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as this is designed to be the most energy efficient configuration.

Hints for fresh food refrigeration

- Do not place hot food directly into the refrigerator or freezer, the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food – particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.

Hints for refrigeration

- Meat (All Types):
Wrap in polyethene food-wrap and place on the glass shelf above the vegetable drawer. Always follow food storage times and use by dates suggested by manufacturers.
- Cooked food, cold dishes, etc.:
They should be covered and may be placed on any shelf.
- Fruits and vegetables:
They should be stored in the special drawer provided.
- Butter and cheese:
Should be wrapped in airtight foil or plastic film wrap.
- Milk bottles:
Should have a lid and be stored in the door racks.

Hints for freezing

- When first starting-up or after a period out of use, let the appliance run at least 2 hours on the higher settings before putting food in the compartment.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to subsequently thaw only the quantity required.
- Wrap up the food in aluminum foil or polyethylene food wraps which are airtight,
- Do not allow fresh, unfrozen food to touch the food which is already frozen to avoid temperature rise of the latter.
- Iced products – if consumed immediately after removal from the freezer compartment – will probably cause frost burns to the skin.
- It is recommended to label and date each frozen package in order to keep track of the storage time.

Helpful hints and tips (con't)

Hints for the storage of frozen food

- Ensure that frozen food has been stored correctly by the food retailer
- Once defrosted – food will deteriorate rapidly and should not be re-frozen. Do not exceed the storage period indicated by the food manufacturer.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the power plug from the main socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the store where you purchased the product.

Warning! A child entrapment warning statement is included in either the operating instructions or in a use and care manual provided with each refrigerator.

DANGER: Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children can not easily climb inside.

PROBLEM	POSSIBLE CAUSE & SOLUTION
<ul style="list-style-type: none"> • Appliance is not working correctly 	<ul style="list-style-type: none"> • Check whether the power cord is plugged into the power outlet properly.
	<ul style="list-style-type: none"> • Check the fuse or circuit of your power supply, replace if necessary.
	<ul style="list-style-type: none"> • The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	<ul style="list-style-type: none"> • It is normal that the freezer is not operating during the defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
<ul style="list-style-type: none"> • Odors from the compartments 	<ul style="list-style-type: none"> • The interior may need to be cleaned
	<ul style="list-style-type: none"> • Some food, containers or wrapping cause odours.
<ul style="list-style-type: none"> • Noise from the appliance 	<p>The sounds below are quite normal:</p> <ul style="list-style-type: none"> • Compressor running noises.
	<ul style="list-style-type: none"> • Air movement noise from the small fan motor in the freezer compartment or other compartments.
	<ul style="list-style-type: none"> • Gurgling sound similar to water boiling.
	<ul style="list-style-type: none"> • Popping noise during automatic defrosting.
	<ul style="list-style-type: none"> • Clicking noise before the compressor starts.
	<ul style="list-style-type: none"> • Clicking noise when you get the water.
	<ul style="list-style-type: none"> • The motor running noises when you get ice.

Troubleshooting (con't)

PROBLEM	POSSIBLE CAUSE & SOLUTION
<ul style="list-style-type: none"> Noise from the appliance (con't) 	<ul style="list-style-type: none"> Check whether the power cord is plugged into the power outlet properly.
	<ul style="list-style-type: none"> Check the fuse or circuit of your power supply, replace if necessary.
	<ul style="list-style-type: none"> The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	<ul style="list-style-type: none"> It is normal that the freezer is not operating during the defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
<ul style="list-style-type: none"> Unusual Noises from the appliance 	<p>Other unusual noises are due to the reasons below and may need you to check and take action:</p> <ul style="list-style-type: none"> The cabinet is not level.
	<ul style="list-style-type: none"> The back of appliance is touching the wall.
	<ul style="list-style-type: none"> Bottles or containers have fallen or are rolling.
<ul style="list-style-type: none"> Doors can't be closed easily 	<ul style="list-style-type: none"> Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self-close,
	<ul style="list-style-type: none"> Is something inside preventing the doors from closing.
<ul style="list-style-type: none"> The motor runs continuously 	<p>It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances:</p> <ul style="list-style-type: none"> Temperature setting is set colder than necessary
	<ul style="list-style-type: none"> Large quantity of warm food has recently been stored within the appliance.
	<ul style="list-style-type: none"> The temperature outside the appliance is high.
	<ul style="list-style-type: none"> Doors are kept open too long or too often.
	<ul style="list-style-type: none"> After installing the appliance or it has been switched off for a long time.
	<ul style="list-style-type: none"> Clicking noise when you get the water.
	<ul style="list-style-type: none"> The motor running noises when you get ice.

Troubleshooting (con't)

PROBLEM	POSSIBLE CAUSE & SOLUTION
<ul style="list-style-type: none"> A layer of frost occurs in the compartment 	<ul style="list-style-type: none"> Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation.
	<ul style="list-style-type: none"> Ensure that door is fully closed.
	<ul style="list-style-type: none"> To remove the frost, please refer to "Cleaning and Care" - pg 16.
<ul style="list-style-type: none"> Temperature inside is too warm 	<ul style="list-style-type: none"> You may have left the doors open too long or too frequently
	<ul style="list-style-type: none"> Doors are kept open by some obstacle
	<ul style="list-style-type: none"> Appliance is located with insufficient clearance at the sides, back or top
<ul style="list-style-type: none"> Temperature inside is too cold 	<ul style="list-style-type: none"> Increase the temperature by referring to the "Display Controls" - pg 12.
<ul style="list-style-type: none"> The light is not working 	<ul style="list-style-type: none"> The LED light may be damaged. Refer to replace LED lights in "Cleaning and Care" - pg 16
	<ul style="list-style-type: none"> The control system has disabled the lights due to the door being kept open too long. Close and reopen the door to reactivate the lights.
<ul style="list-style-type: none"> Hear water bubbling in the refrigerator 	<p>This is normal. The bubbling comes from the refrigerant coolant liquid circulating through the refrigerator.</p>
<ul style="list-style-type: none"> Ice is not dispensing 	<ul style="list-style-type: none"> Did you wait for 12 hours after installation of the water supply line before making ice? If it is not sufficiently cool, it may take longer to make ice, such as when first installed.
	<ul style="list-style-type: none"> Is the water line connected and the water supply open?
	<ul style="list-style-type: none"> Did you manually stop the ice making function? Make sure you do not set the "ice off" mode.
	<ul style="list-style-type: none"> Is there any ice blocked within the ice maker bucket or ice chute?
	<ul style="list-style-type: none"> Is the water pressure less than 30 psi? Install a booster pump to compensate for the low pressure.
	<ul style="list-style-type: none"> Is the freezer temperature too warm? Try setting the freezer temperature lower.

Troubleshooting (con't)


PROBLEM	POSSIBLE CAUSE & SOLUTION
<ul style="list-style-type: none"> Ice is not dispensing (con't) 	<ul style="list-style-type: none"> Ice maker is not making the ice fast enough. Please wait for at least 90 minutes.
<ul style="list-style-type: none"> Water dispenser is not functioning 	<ul style="list-style-type: none"> Is the water line connected and the water supply open?
	<ul style="list-style-type: none"> Has the water line been crushed or kinked? Make sure the waterline is free and clear of any obstruction.
	<ul style="list-style-type: none"> Is the water tank frozen because the refrigerator temperature is too low? Try selecting a warmer setting on the display panel.
	<ul style="list-style-type: none"> Check if the filter is properly installed. If it is not properly installed, the water dispenser may not work.

Disposal

Old appliances still have some residual value. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

The refrigerant used in your appliance and insulation materials requires special disposal procedures.

Ensure that none of the pipes on the back of the appliance are damaged prior to disposal. Up to date information concerning options for disposing of your old appliance and packaging from the new one can be obtained from your local council office.

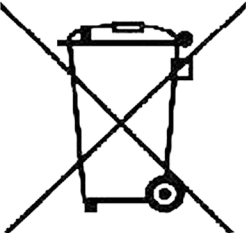Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.</p>

Door Removal



Tools you will need (not provided).

Allen Wrench (4mm)	Wrench (8mm)	Philips Screwdriver


Disassembling the refrigerator door

Some models may be slightly different from pictures. If some parts shown in the picture cannot be found in your appliance, please ignore the relevant description.


1. With the door closed, remove the 3 screws holding the top cover (A) with Philips (+) screwdriver, and then remove the top cover with the entire harness attached.

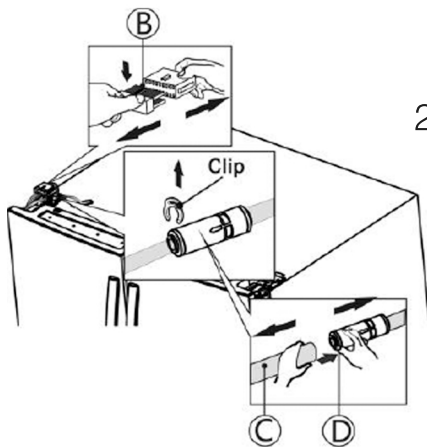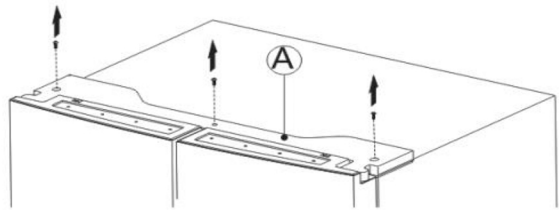

2. Take out connectors and the water coupler from the installation clip. Remove the two wire connectors (press the top of the connector (B) and separate it from the other one) on the left side door. To remove the water coupler from the hinge, twist and pull the clips from the coupler then remove the water line (C) while pressing the movable part (D) of the water line coupler.

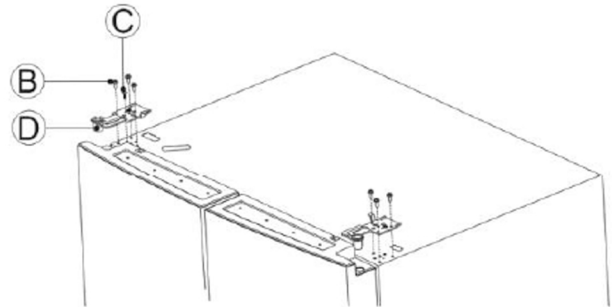


3. Remove the 3 screws (B) fixed on the hinges with a wrench (8 mm) and 1 ground screws (C) attached to the hinge with Philips (+) screwdriver. Remove the upper left and right door hinges (D).

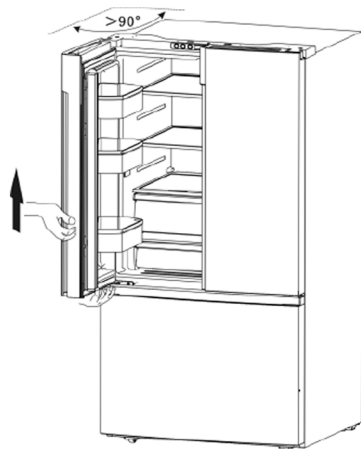

4. Use your both hands to open the door more than 90°. Lift it up and take it off.

5. Remove the 4 hex head bolts hinges (E) with an Allen wrench (4 mm). Remove the lower left and right door hinges (F).

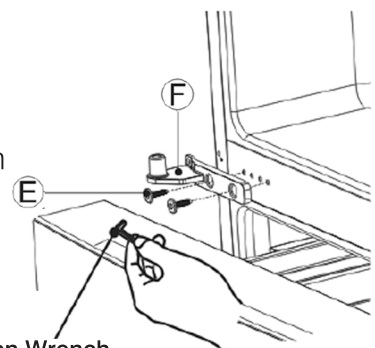


Allen Wrench

Door Removal (con't)

Re-attaching the refrigerator door


To re-attach the refrigerator doors after you have moved the appliance to its final location, assemble the parts in reverse order.

1. To prevent water leaks, the water line should be fully inserted into the center of the coupler until the guide lines are coincided exactly with the head of the movable part.

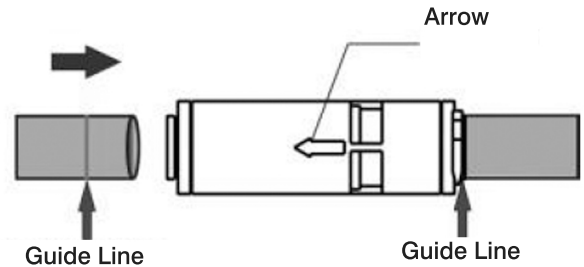

Note:

Arrow on the water line coupler should point to the direction of the door.

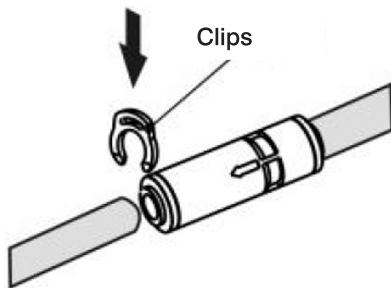



2. Make sure the clips are properly connected to the coupler.

Caution!


In case the refrigerator doors can't be self closed, please make sure the door opened more than 90° when you remove or re-attaching the refrigerator doors

Disassembling the freezer door


1. Pull out the freezer door and the upper freezer drawer (A) to the final position. Then take out the ice box (B) by lifting it up in the direction of the arrow.

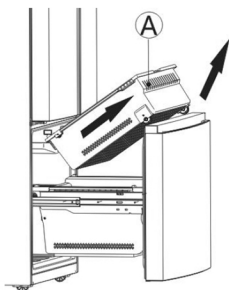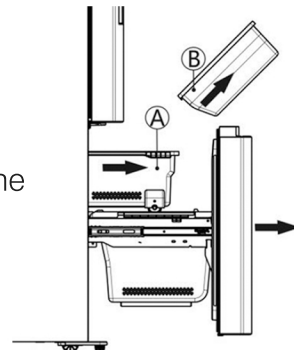


2. Take out the upper freezer drawer (A) by lifting it up from the rail system.

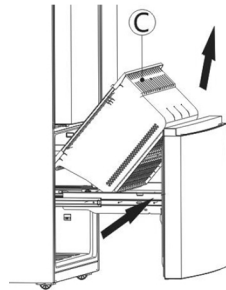

3. Remove the lower freezer drawer (C) by lifting it up.

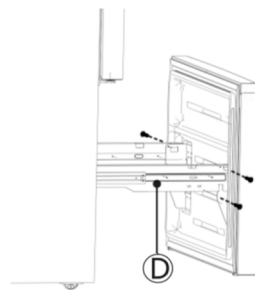

4. Remove the 4 screws attached to the supporting frame (D).

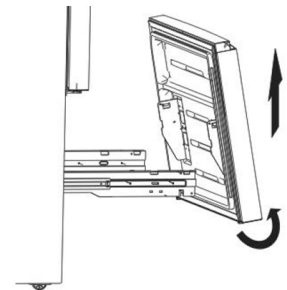

5. Pull out the freezer door and lift it up in the direction of the arrow.

Re-assembling the freezer door

To re-assemble the drawer after you moved the appliance to its final location, assemble the parts in reverse order.

Installing the water lines and filter

(Only applicable for models with ice maker)

A water dispenser with a filter is one of the helpful features on your new appliance. To help promote better health, the water filter removes unwanted particles from your water. However, it does not sterilize or destroy microorganisms. You may need to purchase a water purifying system to do that.

In order for the ice maker to operate properly, a water line is required.

- the maximum inlet water pressure is 689KPa;
- the minimum inlet water pressure is 207KPa.


Warning:

- The water connection must be made by a qualified plumber. Operation outside the water pressure range may cause malfunction, severe and damaging water leaks.
- Under normal conditions, a 200cc (5.75 oz.) cup can be filled in about 10 seconds.
- If the refrigerator is installed in an area with low water pressure (below 30 psi), you can install a booster pump to compensate for the low pressure.

Connecting to the water supply

You will need the following tools and parts (not included)


You need to purchase several items to complete this connection. You may find these items sold as a kit at your local hardware store.

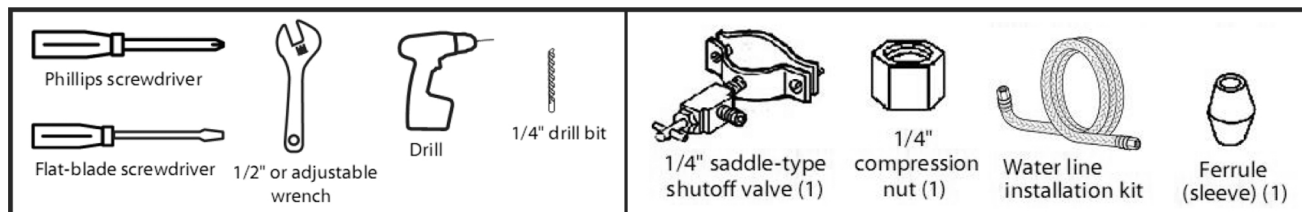

Warning:

Make sure that you:

- Use the tubing that came with your refrigerator and the water supply installation kit. **Do not use old tubing.**
- Connect to the cold water pipe. If you connect to the hot water pipe, the purifier may malfunction.
- Connect with the drinkable water only.
- Do not contaminate the water pipes during installation.

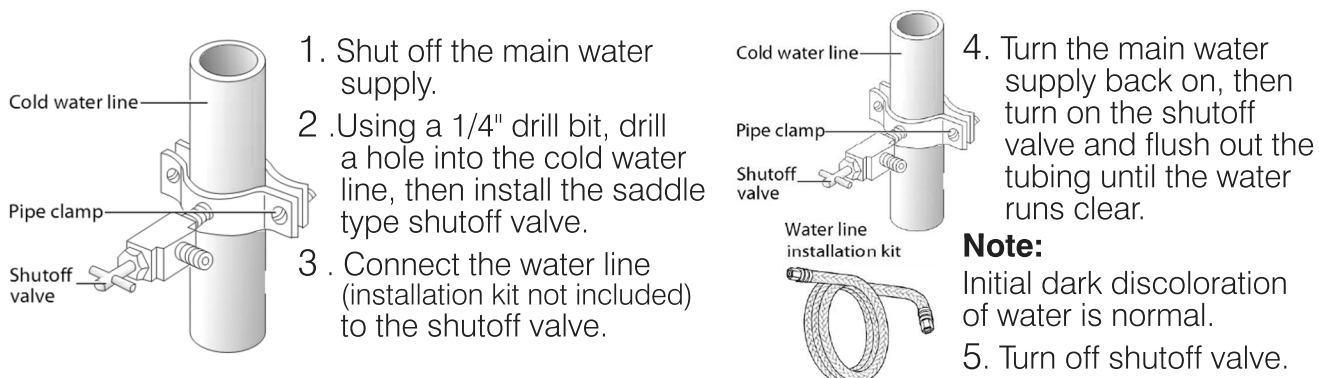

Installing the water lines and filter (con't)

Connecting the water supply to filter inlet

You need to purchase several items to complete this connection.

You may find these items sold as a kit at your local hardware store.

You can use plastic tubing, copper tubing, or stainless steel tubing as the water line installation kit.


Plastic Tubing	Copper Tubing	Stainless Tubing
1/4" tubing with molded end	1/4" tubing	1/4" tubing
1/4" compression nut (1)	1/4" compression nut (1) Ferrule (2)	1/4" compression nut (1)

1 Connect the water supply line to the compression fitting (assembled with a 1/4" tube, included in refrigerator).

- If you are using copper tubing, slip the compression nut (not supplied) and ferrule (not supplied) on the copper tubing (not supplied).
- If you are using plastic tubing, insert the molded end (bulb) of the plastic tubing into the compression fitting.

Important: Do not use without the molded end (bulb) of the plastic tubing.



- If you are using stainless steel tubing, slip the compression nut on the copper tubing (not supplied).

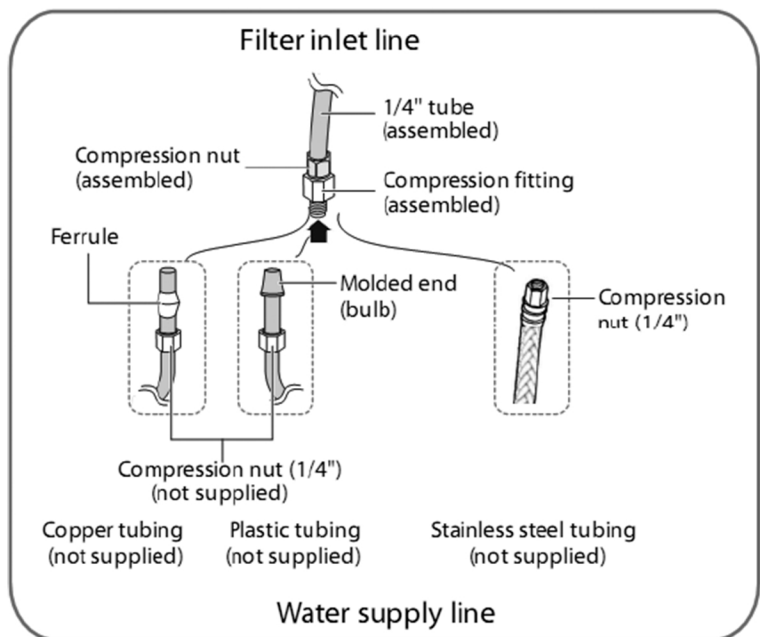

2 Tighten the compression nut onto the compression fitting. Do not over-tighten the compression nut.

3. Connecting the 1/4" tube (assembled with compression nut and compression fitting) to water filter inlet, following these steps below.

 1) Take two clips out, then pull out two stoppers of the water filter.

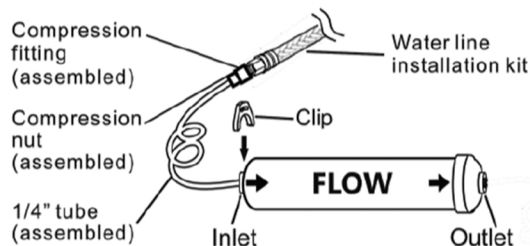


2) Fully insert the 1/4" tube into the inlet of the water filter.

3) Insert a clip in the proper position as the figure shown to the right and confirm that the clip holds the 1/4" tube firmly.

Connecting the water filter outlet to refrigerator


A connector, two clips and a water line (1/4") are provided with refrigerator for installation.

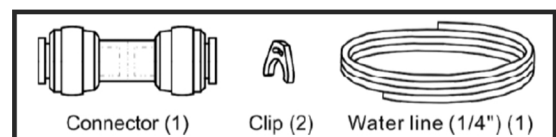

Installing the water lines and filter (con't)


Connecting the water filter outlet to refrigerator (con't)

1. Fully insert one head of the water line (1/4") into the outlet of water filter.
2. Insert a clip in the proper position as the figure shown below and confirm that the clip holds the water line (1/4") firmly.

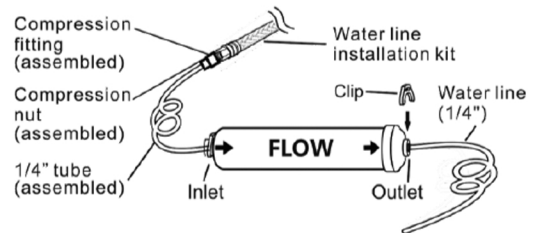

Note:

- In order to fix the water filter at the proper position and avoid over bending the water line (1/4"), you should determine the distance from the shutoff valve to the filter mounting location previously. Then cut the water line (1/4") as required length.

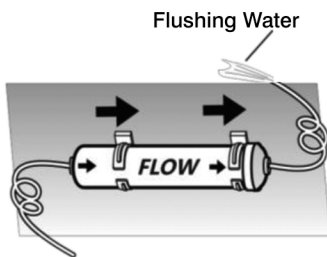

3. After connecting the water line 1/4"), please turn on the shutoff valve to flush the filter for 5 minutes before use.


Note:

- The initial dark discoloration of water is normal.
4. Connect the water line 1/4") with refrigerator by a connector.
 - 1) Fully insert the other head of the water line (1/4") into the connector.
 - 2) Fully insert the water line of the refrigerator (at the right of the compressor room) into the connector.

- 3) Insert two clips in the install pack as shown below, and then confirm that each clip holds the water line firmly.

Note:

- The water line must be fully inserted into the center of the connector to prevent water leaking.

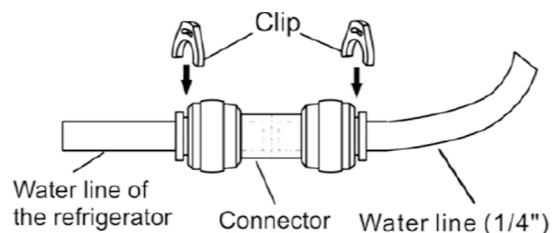

Fixing the water filter

To fix the water filter, follow these steps below.

1. Determine the location to mount the water filter.

Note:

- The water filter should be mounted on the wall where it is convenient to be replaced.
 - Do not mount the filter onto the refrigerator! Coolant pipes might be pierced!
2. Determine the distance from the shutoff valve to the filter mounting location, and the distance from the filter mounting location to the refrigerator.
 3. To avoid over bending the water line, cut the water line 1/4") as required length according to the determined distance previously.
 4. Mount the filter holder onto the wall by using a screwdriver and attach the water filter.

Warning!

- The water filter must be held upright as shown in the figure. It is critical to connect the water line tube into the filter inlet and outlet correctly.



Installing the water lines and filter (con't)

Fixing the water filter (con't)

4. Mount the filter holder onto the wall by using a screwdriver and attach the water filter.

Warning!

- The water filter must be held upright as shown in the figure. It is critical to connect the water line tube into the filter inlet and outlet correctly.
- The water line (1/4") length should be less than 5m. If the water line is too long (>5m), the ice and cold water content may be affected due to insufficient water pressure.

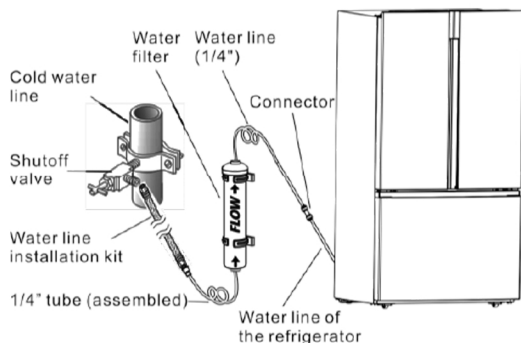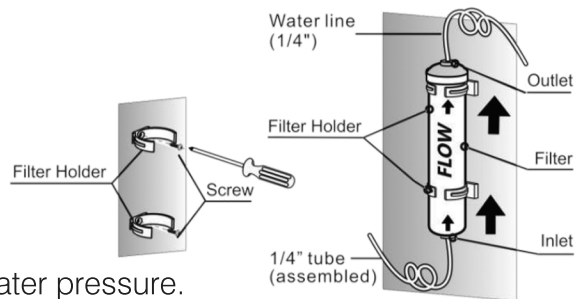

5. After connecting the water supply, water filter, and the refrigerator, water connecting system layout shows below.

Note:

- It is recommended to employ a qualified person to install the water system.
- If you have to repair or disassemble the water line, cut off the ends of water line (1/4") to make sure you get a snug, leak-free connection.

Warning!

- After turning on the shutoff valve, make sure that there is no leakage at all connection points of the water lines.
If there is a leakage, turn off the shutoff valve immediately and tighten the connector or make the water lines fully inserted into the connector.
- Flush one gallon of water (approximately five minutes) through the filter before drinking or using the water from your refrigerator.
 - To flush, press a large glass or cup against the water dispenser lever. Fill the glass, then empty it into the kitchen sink.
 - Repeat until you dispense about one gallon of water.
- The first time you use the water dispenser, you may hear the sound of water pushing air out of the water dispenser. This is normal.
- After powering on the refrigerator, let the ice maker make ice for one to two days, then throw out the first one or two buckets of ice to make sure that all impurities have been removed from the water lines.
- Do not pull hard on the water lines, it may damage the water system.
- The water line should not be pressed by heavy things and should not bend too much.

Two Year Limited Warranty

Manufacturer provides a limited warranty for each new refrigerator to be free from defects in material and workmanship for a period of 2 year from the date of purchase. Manufacturer agrees to remedy any such defective inside accessory components such as door panels, door shelves, racks, handles, casters, bins and drawers or to furnish a new unit if the unit proves to have failed, at the company's option, for two year from your original date of purchase.

In the event the unit requires replacement or refund under the terms of this limited warranty, the Buyer is responsible for all transportation expenses to return the unit prior to receiving a replacement unit or refund. A copy of the dated sales receipt/invoice is required to receive benefits of this limited warranty.

This limited warranty covers appliances in use within the continental United States, Alaska, and Hawaii, and Puerto Rico.

This limited warranty does not cover the following:

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Products that have been transferred from its original owner to another party or removed outside the USA.
3. Rust on the interior or exterior of the unit.
4. Damages due to shipping damage or improper installation.
5. Damages due to misuse or abuse.
6. Service calls, repairs, and labor expenses for any purpose.
7. Content losses and food spoilage due to failure of the unit.
8. Punctures to the evaporation system due to improper defrosting of the unit.
9. Replacement or resetting of house fuses or circuit breakers.
10. Failure or defects of this product if used for other purposes than its intended purpose or used other than in accordance with the provided instructions.
11. Disposal costs for failed unit not returned to Manufacturer.
12. Any delivery/installation costs incurred as the result of a unit that fails to perform as specified.
13. Expenses for travel and transportation for product if you are exchanging or returning the unit.
14. Expenses related to the removal and re-installation of your unit or for making the unit accessible, such as removal of trim, cupboards, shelves, etc. or if not installed in accordance with the provided installation instructions.
15. Damages to the finish of the unit or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
16. Damages caused by external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.
17. Refunds for returned products are limited to the price paid for the unit per the sales receipt.

Disclaimer of Implied Warranties, Limitation of Remedies and Exclusions:

EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH HEREIN, MANUFACTURER MAKES NO WARRANTY WHATSOEVER (OR THE SHORTEST PERIOD ALLOWED BY LAW) REGARDING THE GOODS, INCLUDING ANY (1) WARRANTY OF MERCHANTABILITY; (2) WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE; (3) WARRANTY OF TITLE; OR (4) WARRANTY AGAINST INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS OF A THIRD PARTY; WHETHER ARISING BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE, OR OTHERWISE. BUYER ACKNOWLEDGES THAT IT HAS NOT RELIED ON ANY REPRESENTATION OR WARRANTY MADE BY MANUFACTURER, OR ANY OTHER PERSON ON MANUFACTURER'S BEHALF. REPLACEMENT OF UNIT AND LISTED PARTS IN ACCORDANCE WITH THE TERMS HEREIN, IS YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY. MANUFACTURER IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES AND NO REPRESENTATIVE OR PERSON IS AUTHORIZED TO ASSUME FOR MANUFACTURER ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. UNDER NO CIRCUMSTANCE IS THE CONSUMER PERMITTED TO RETURN THE UNIT TO MANUFACTURER WITHOUT THE PRIOR WRITTEN CONSENT OF MANUFACTURER.

Customer Service, (toll free: 1-877-394-2979) between the hours of 8:00 am and 4:00 pm EST
EMAIL: superiore@onpointwarranty.com

State of California Proposition 65 Warnings:

WARNING: This product contains one or more chemicals known to the State of California to cause cancer.

WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

SUPERIORE

www.SUPERIORE.us